



ULTRA-TRAK

5-IN-1 PRESSURIZED FLOORING APPLICATOR
MODEL 5017

USER MANUAL

OPERATING & CLEANING INSTRUCTIONS

CONGRATULATIONS ON YOUR NEW **ULTRA-TRAK**



**MAXIMIZE
FINISH QUALITY**



**MINIMIZE
COSTS**



**MAXIMIZE
EFFICIENCY**

We had you in mind when we developed this applicator. Through a mix state-of-the-art technology and common-sense engineering we designed the most time efficient and easy to use 5-In-1 applicator ever.

Our proprietary patented technology is industry proven and solves the two biggest challenges floor care specialists face: labor savings and superior results.

The Ultra-Trak can be used on tile, terrazzo, concrete, gym floors and all hard floor surfaces.

**FULL SUPPORT
CONTACT US**

1-708-570-0650
INFO@FAS-TRAKIND.COM
WWW.FASTRAKIND.COM





TIPS FOR GETTING THE BEST RESULTS

FRIENDLY ADVICE

EASY TIPS

- A** Clean the unit after each shift - it only takes a minute.
- B** Stay away from the baseboards/corners; people don't walk there!
- C** Switch the unit "OFF" about 10 feet before making a turn. Then make the turn and switch unit back "ON".
- D** You can always turn the unit "OFF" and do unusual areas, as there is plenty of chemical on the pad.
- E** If the unit begins to streak or starve for lack of chemical STOP and check the suction hose. Chances are, debris here is the cause of the issue.
- F** Always have a full container ready to go! Check your factory container of chemical on the unit occasionally so you don't run out during your work.

CONTACT US

WE ARE HERE TO HELP

ULTRA-TRAK TECH LINE	1 708 570 0650
GENERAL ENQUIRIES	1 800 840 3162
EMAIL US	info@fas-trakind.com
OUR WEBSITE	www.fas-trakind.com

PERSONAL ONLINE TRAINING SESSIONS WITH MARK	Schedule a personal Facetime Training Session with Mark by calling 708 250 5465.
--	--






USING THE ULTRA-TRAK

1

PREPARATION

1.0 - GETTING STARTED

- A** Ensure the batteries are fully charged.
- B** Use a paperclip to check the manifold is clear before each use.
- C** Presoak applicator pad with desired coating product and hand wring.

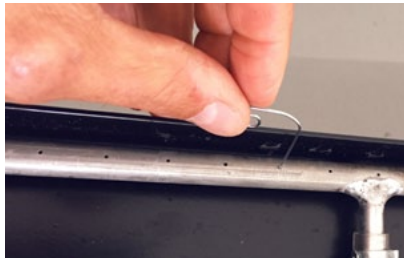

CHECKING THE MANIFOLD BEFORE EACH USE ENSURES BEAUTIFUL EVEN COVERAGE, EVERY TIME.

2

ATTACH HEAD ASSEMBLY

2.0 - HOW TO ATTACH THE HEAD ASSEMBLY

- A** Insert the stud pin.
- B** Insert the spring latch bracket on the other side.
- C** Connect the feed hose connectors together and twist to lock.




3

INSERT LIFT HANDLE INTO HEAD ASSEMBLY

3.0 - HOW TO INSERT THE LIFT HANDLE

- A** Insert the end of lift handle hole into the post on the head assembly.
- B** Lift the head assembly off the floor and hook it into the “up” position.

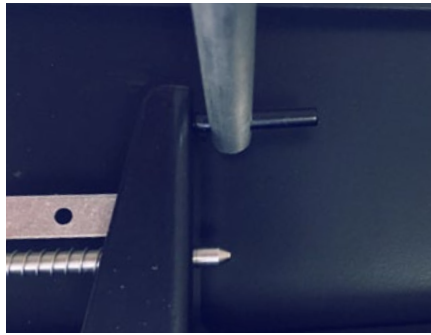

4

LOAD THE FLOORING PRODUCT

4.0 - HOW TO LOAD THE PRODUCT

- A** Place the factory 5 gal pail/BIB container on the base of the machine.
- B** Insert the suction hose into the pail/ container.
- C** The metal suction filter at the end of the suction hose should be flat on the bottom of the container.



*SIMPLY INSERT THE
TUBE DIRECTLY INTO THE
FACTORY CONTAINER.
NO TRANSFER REQUIRED!*



PREPARING THE ULTRA-TRAK FOR USE

5.0 - PRIME THE ULTA-TRAK

- A** Position the Ultra-Trak where you are going to begin application.
- B** Use the lift handle to lower the head assembly down to the floor,
- C** Set the “Power On” switch to “On.”
- D** Press the “Manual Pump” switch and hold until solution flows through the distribution tube onto the floor.

5.1 - SATURATE THE APPLICATION PAD

- A** Ensure you have enough solution on the pad to prevent streaking.
- B** While lifting and lowering the head assembly, move the Ultra-Trak back and forth to saturate the pad with solution.



ENSURE THERE IS ENOUGH SOLUTION ON THE PAD. IF THE PAD IS NOT SATURATED, STREAKING CAN OCCUR.

PRODUCT FLOW RATE

6.0 - PRODUCT FLOW RATE: TIMER SETTING

- A** The Ultra-Trak dispenses product when pulled. Each revolution of the wheels activates the pump and dispenses solution.
- B** The amount dispensed is controlled by the timer setting.
- C** Flow rate is usually between 2-5 on the dial, depending on the requirements of your coating product..
- D** Walk the Ultra-Trak about 25 feet and adjust the flow rate accordingly.



THE PUMP IS ONLY ACTIVATED WHEN THE MACHINE IS PULLED. PUSHING THE MACHINE DOES NOT ACTIVATE THE PUMP.

10 FEET AHEAD OF COMPLETING A PASS, TURN "OFF" THE POWER SWITCH TO ALLOW FOR DISPENSER LINE DRAINAGE. ONCE THE UNIT IS POSITIONED FOR THE NEXT PASS, TURN "ON" THE POWER & RESUME WALKING SPEED.

USING THE ULTRA-TRAK

7.0 - MAIN AREAS

- A** Begin pulling in a straight line.
- B** Once the initial line is complete, a “wet edge” must be maintained with an overlap of 3 to 4 inches per pass.
- C** Stay 3 inches away from the edges to avoid finish accumulation at the edges.
- D** Between coats, cover the head assembly with the black Velcro vinyl bag in to protect the manifold and pad from drying out.

7.1 - FOR SMALL AREA EDGES & CORNERS: WE RECOMMEND THE MICRO-TRAK

- A** Use the Micro-Trak detail applicator for edges & corners.
- B** Use on the first and/or last coat to speed up the process.

ALTERNATIVELY...

For areas too large for a Micro-Trak, and too small for convenient use of an Ultra-Trak, consider the **Sting-Ray**. Its easy product dispensing and 18” applicator provides for smooth and even coating of medium-sized surface areas.



THE MICRO-TAK



THE STING-RAY

FINISHING UP

8.0 - FINISHING UP

- A** Near the completion of each job, on the last 20 - 30 feet, pull the suction hose out of the solution container and use up the solution left in the system.
- B** Turn unit "off" 15 feet before you finish an area to draw excess finish from pad.
- C** Pull the lift handle in the up position to get head off the ground for easy cleaning and transport/storage.
- D** Cover the head assembly with the black Velcro vinyl bag to protect the manifold and pad from drying out before cleaning.



CLEANING HOOK

STORAGE HOOK

DO YOU HAVE OPERATIONAL QUESTIONS OR PROBLEMS?

WE ARE HERE TO HELP

ULTRA-TRAK TECH LINE 1 708 570 0650
GENERAL ENQUIRIES 1 800 840 3162
EMAIL US info@fas-trakind.com
OUR WEBSITE www.fas-trakind.com

PERSONAL ONLINE TRAINING SESSIONS WITH MARK Schedule a personal Facetime Training Session with Mark by calling 708 250 5465.





CLEANING


OVERVIEW

TOP TIPS

Cleaning out the Ultra-Trak base only takes 1 minute!
It is extremely important that it cleaning is done properly. Why? Unused solution can dry and cause the distribution tube and pump to become inoperable. Take care of the Ultra-Trak, and it will take care of you.

WHAT DO I NEED?

- A Paper clip.
- Approximately 1 gallon of water or solvent.
- A sink for rinsing with cold water.
- The black plastic Cleaning Tray.

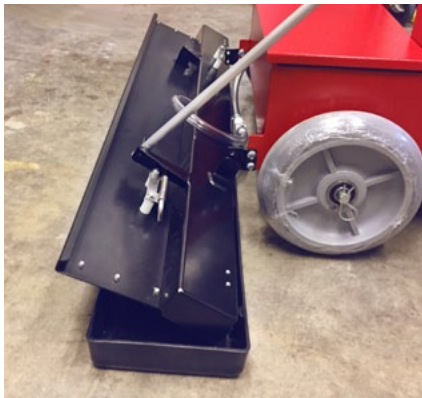

DO NOT MACHINE WASH OR MACHINE DRY THE FINISH PAD. RINSE AT SINK WITH COOL WATER.

THE CORDLESS ULTRA-TRAK COMES WITH A STRONG RECHARGEABLE BATTERY THAT RUNS FOR 4-7 HOURS PER CHARGE.

VISIT OUR WEBSITE TO SEE THE ULTRA-TRAK FREQUENTLY ASKED QUESTIONS PAGE.



PLAN & PREPARE

10.0 - PLAN YOUR JOB EXIT

- A** Near the completion of each job, raise the suction hose out of the solution container and use up the solution left in the system on the last 20 to 30 feet.

10.1 - PREPARE IN ADVANCE

- A** A clean 5-gallon container of water (or solvent) approximately 1/3 full. This is also a good place to keep the mop pad and black vinyl cover if it cannot be rinsed out right away after a job is complete after you flush the unit first.

10.2 - REMOVE THE BLACK BAG & FINISH PAD TOGETHER

- A** Drop the lift handle to the “second” hook & position over the black cleaning tray.
- B** Remove excess water from the finish pad and wring it out and hang to dry.

10.1 - RECAP THE CONTAINER

- A** Remove the factory container and recap the unused portion for future use. Zero waste.




11

CLEANING UP

11.0 - HOW TO CLEAN THE PUMP SYSTEM

- A** Clean the system with clear water or solvent, according to the flooring finish applied, using the 5 gal pail.
- B** Place the suction hose into the 5 gal pail and press the “manual pump” switch to clean the system.
- C** Run water for about 15 seconds till it is clear.
- D** Remove suction hose and purge the water out.

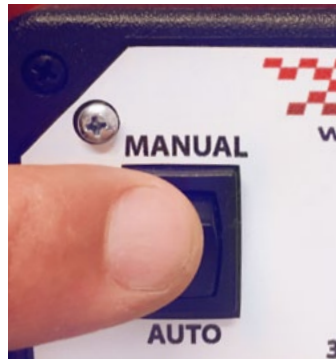

12

CLEANING THE HEAD ASSEMBLY

12.0 - HOW TO CLEAN THE HEAD ASSEMBLY

- A** Remove the head assembly and rinse with cool water.
- B** Remove the yellow end caps & verify the inside of the distribution tube is clean.
- C** Use a scrub pad to remove any build up collected on the tube near the holes.
- D** Use a paper clip to clear any blocked holes on the tube.
- E** Place the yellow end caps back on the tube.
- F** Reinstall back on the head assembly.



PACKING AWAY

13.0 - PACK UP CORRECTLY FOR NEXT TIME

- A** Batteries should be re-charged each time the machine is used. The 12-volt Genius charger should be plugged into a 110-volt outlet in a dry, indoor area. Make sure the "Power" switch is in the "Off/Charge" position. Low batteries may require up to 5 hours of re-charging.
- B** Wipe the Ultra-Trak down with a clean towel after each use.

WATCH THE ULTRA-TRAK HOW-TO VIDEO



Scan this QR Code with your phone to be taken to the How To Use The Ultra-Trak video.

CONTACT US

WE ARE HERE TO HELP

ULTRA-TRAK TECH LINE	1 708 570 0650
GENERAL ENQUIRIES	1 800 840 3162
EMAIL US	info@fas-trakind.com
OUR WEBSITE	www.fas-trakind.com

**PERSONAL ONLINE
TRAINING SESSIONS
WITH MARK**

Schedule a personal Facetime Training Session with Mark by calling 708 250 5465.

